

Steering Wheel Control Interface for Isuzu Vehicles



i. 16 Pin Vehicle Specific Connector

ii. Female ISO Connector

iii. Interface Box



APPLICATION.

Note: Application data is subject to change at any time

Isuzu D-Max 2012 - 2020 Isuzu MU-X 2014 - 2020 Chevrolet Colorado 2012 - 2014

FEATURES

- Retains Factory Steering Wheel Control Functions
- Retains Factory Phone Buttons

DISCLAIMER

The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s. This instruction manual is based on documented data and research. The manufacturer of this product cannot be held responsible for any changes made to the vehicle by the manufacturer or damages that may occur through the installation of this product in accordance with the steps outlined herein.

PRODUCT INFORMATION

CTSIZ001.2

Analogue interface for the Isuzu/Chevrolet vehicles. This interface retains the steering wheel controls and factory phone buttons (if vehicle is equipped).

Note: this product will is for non-amplified vehicles.

WIRING KEY


IN WIRING HARNESS

Purple Right Rear Speaker + Right Rear Speaker -Purple/Black Left Rear Speaker + Green Green/Black Left Rear Speaker -Right Front Speaker + Grey Right Front Speaker -Grey/Black Left Front Speaker + White White/Black Left Front Speaker -

Yellow Permanent 12V
Black Ground
Red Ignition 12V
Orange Illumination
Blue Antenna Remote

STEERING WHEEL CONTROL FUNCTIONALITY

The following diagram, though based on careful research, is an example only Individual steering wheel control configurations may differ.

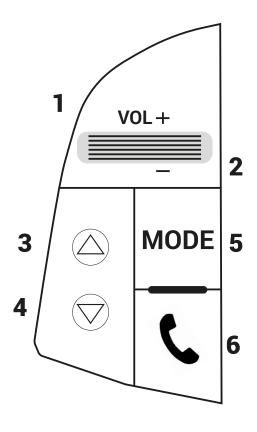

- 1. Volume Up
- 2. Volume Down
- 3. Track Up
- 4. Track Down
- Source

2

6. Pick Up (**Short Press**)
Hang Up (**Long Press**)

CTSIZ001.2_IG_v2

PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are used during the installation to avoid damage to the vehicle or product.

Connects2 can not be held responsible for the installation of this product.

INSTALLATION GUIDE

See wiring diagram on Pg.4 for more information

Before installing the interface, the factory stereo must be removed and disconnected. To do this, please consult the vehicle owner's manual/handbook or contact a fitting professional.

A stereo connection (patch) lead is also required for the installation of this interface (supplied seperately). Please ensure that you have the correct lead before proceeding. For universal patch leads, prepare the wiring loops in accordance with the instruction manual supplied with the product before installation.

- 1. Connect the 12 Pin connector from the stereo connection (patch) lead to the interface box
- 2. Connect the opposite end of the stereo connection (patch) lead to the steering wheel control input on the back of the aftermarket stereo

NOTE: This may be a 3.5mm jack connector or a wired input depending on the brand of aftermarket stereo being fitted. Please consult the aftermarket stereo installation manual for further information on where to make the connection


- IMPORTANT: THIS STEP MUST BE COMPLETED BEFORE CONNECTING POWER TO THE INTERFACE.
 FAILURE TO DO SO MAY RESULT IN A LACK OF FUNCTIONALITY AND THE NEED TO REINSTALL THE
 PRODUCT
- 3. Connect the 14 Pin connector from supplied wiring loom to the interface box
- 4. Connect the power/speaker ISO connector to the power/speaker ISO connector at the rear of the aftermarket stereo.

NOTE: For aftermarket stereos which <u>do not</u> have an ISO connector, please see "Wiring Key" on Pg.2 for information on which wires to connect

- 5. Connect the 16 pin vehicle specific connector to the vehicles main power connector.
- 6. Test stereo and steering wheel control functionality for correct operation before reassembling the vehicle dashboard. If steering wheel control functions are unresponsive, please uninstall the interface and wiring and reinstall carefully in accordance with the above steps.

For further help, please contact and fill out a support ticket with the full details of your issue at: support.connects2.com/tickets/technical

WIRING DIAGRAM

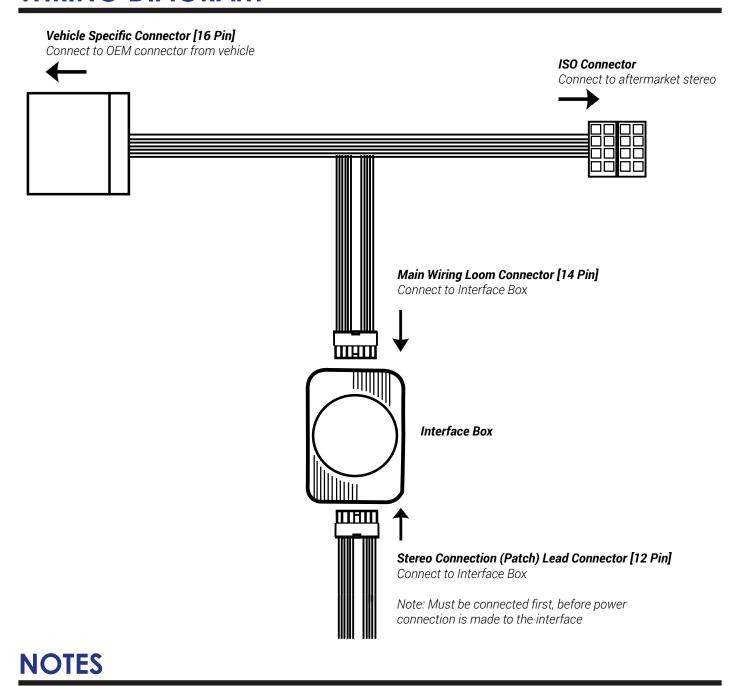

4