

Peugeot Expert, Traveller 2016>

(Black)



Tools Required: _____

- Panel Removal Tool/s
- Screwdriver/s

DISCLAIMER

This instruction booklet is based on carefully documented data and research. Connects2 cannot be held responsible for discrepancies/inconsistencies that may occur due to automobile manufacturing changes, options, or damage that may occur in the vehicle during the installation of components while using this booklet

Need help with your installation? Visit support.connects2.com

STEP ONE

Use a panel removal tool to remove the fascia panel surround

**STEP TWO**

Remove the connection to the air conditioning panel

**STEP THREE**

Remove the four screws from around the fascia panel and remove the display

**STEP FOUR**

Unplug the black and white connectors from the display



STEP FIVE

Use a screwdriver to remove the two screws either side of the radio and remove the radio

**STEP SIX**

Remove all connections from the back of the radio

**STEP SEVEN**

Remove the four screws holding the black plastic cage in place and remove the cage

**STEP EIGHT**

Remove the vents from the OEM panel by releasing the clips

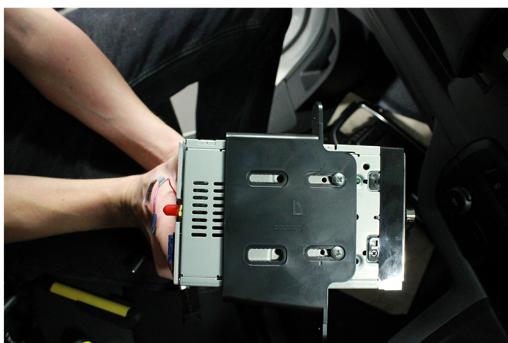


STEP NINE

Screw the right bracket into position on the side of the aftermarket head unit

**STEP TEN**

Screw the left bracket into position on the side of the aftermarket head unit

**STEP ELEVEN**

Place the aftermarket head unit into the dash and screw into place

**STEP TWELVE**

Reassemble everything in reverse order of disassembly to complete your installation

