



CT24SA10

Double/Single DIN Fitting Kit *for Saab 9-3 vehicles*



IN THE KIT

- Double DIN Fascia Panel
- 2x Radio Brackets
- 4x Self Tapping Screws
- 8x Radio Bracket Screws

APPLICATION

Note: Application data is subject to change at any time

Saab 9-3 (YS3F)

2006 - 2014

FEATURES

- Allows for the installation of a double DIN aftermarket stereo
- Allows the retention of the original climate controls
- Includes mounting brackets and accessories
- Finished in black to match vehicle dashboard

DISCLAIMER

The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s. This instruction manual is based on documented data and research. The manufacturer of this product cannot be held responsible for any changes made to the vehicle by the manufacturer or damages that may occur through the installation of this product in accordance with the steps outlined herein.


PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are used during the installation to avoid damage to the vehicle or product. **Connects2 can not be held responsible for the installation of this product.**

INSTALLATION GUIDE


DASH DISASSEMBLY

1.

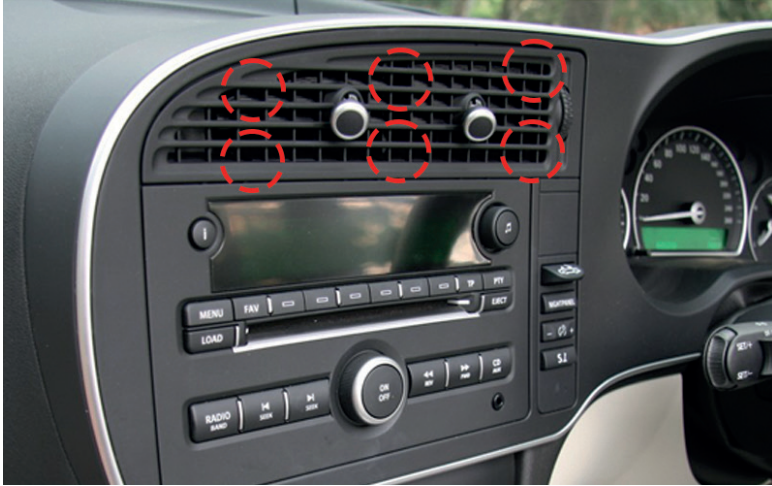

Begin by using either a panel removal tool or flat head screwdriver and lever the clips that hold the top air vents in place. The location of these clips is roughly shown on the image.

Please take care not to damage any of the surrounding air vent aperture.

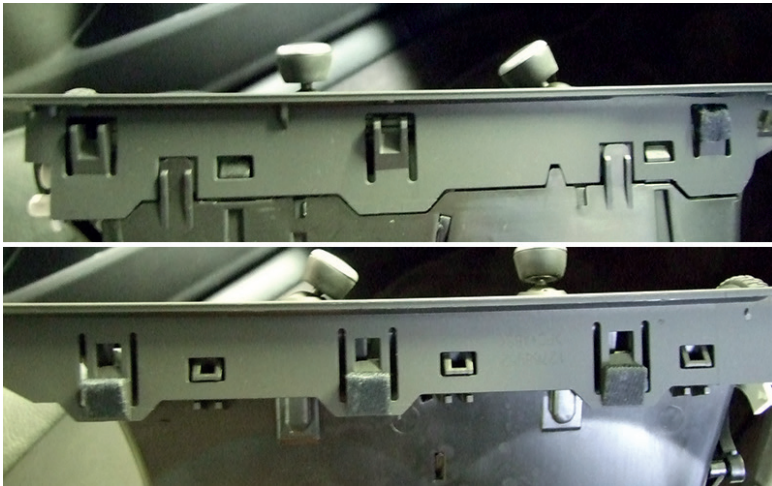

As you can see from the images, there are three clips located on top and on bottom, take due care not to damage either of these clips during removal.

2.



With the air vents out of the way, proceed to undo the two screws located directly on top of the radio. Once free, pull out and disconnect all the wiring.

INSTALLATION GUIDE

KIT ASSEMBLY

3.



Take the brackets as well as the 4x self tapping screws and attach these to the back of the fascia.

4.



With the brackets attached, take the 8x screws within the kit and offer the head unit to the back of the fascia.

At this point it is best to lightly screw the unit into place and then test fit to gauge the correct depth.

DASH ASSEMBLY

5.



With the head unit prepared and connected, push the unit and fascia into the open aperture and fix into place using the pre-existing screws.

Reinstall the air vents above to complete the installation.

NOTES
