



CT23MB11

Double DIN Fitting Kit for Mercedes Benz Vehicles



- i. Double DIN Fascia Panel
- ii. Trim Panel
- iii. Radio Cage
- iv. Fitting Accessories

APPLICATION

Note: Application data is subject to change at any time

Mercedes Benz SL (R230) 2001 - 2011*

**Note: Vehicles 2001 - 2006 will require modification to the centre console*

RECOMMENDED TOOLS

- Panel Removal Tool
- Screwdriver
- Cutting Tool

FEATURES

- Allows for the installation of a double DIN aftermarket stereo
- Includes mounting brackets and fitting accessories
- Finished in black to match vehicle dashboard

DISCLAIMER

The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s. This instruction manual is based on documented data and research. The manufacturer of this product cannot be held responsible for any changes made to the vehicle by the manufacturer or damages that may occur through the installation of this product in accordance with the steps outlined herein.

PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are using during the installation to avoid damage to the vehicle or product. Connects2 can not be held responsible for the installation of this product.




INSTALLATION GUIDE

DASH DISASSEMBLY

1. Use a panel removal tool to remove the side panels on the right and left sides of the centre console (Fig. A).

2. Remove the six (6) Torx screws from behind the side panels. (Fig. B, a,b,c)



3. Remove the middle part of the centre console and disconnect all connections (Fig. C).

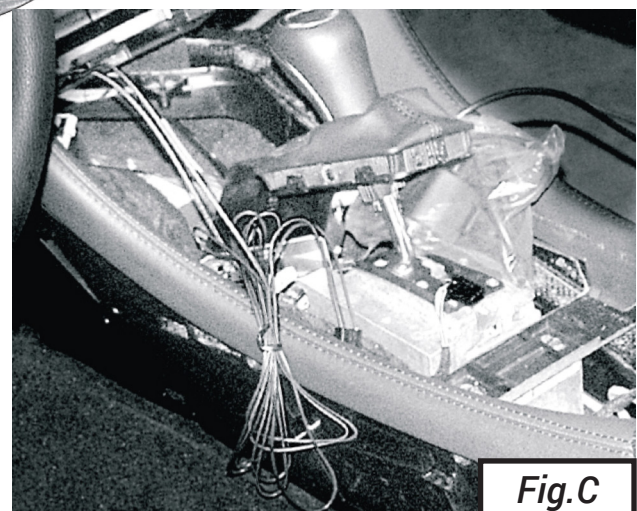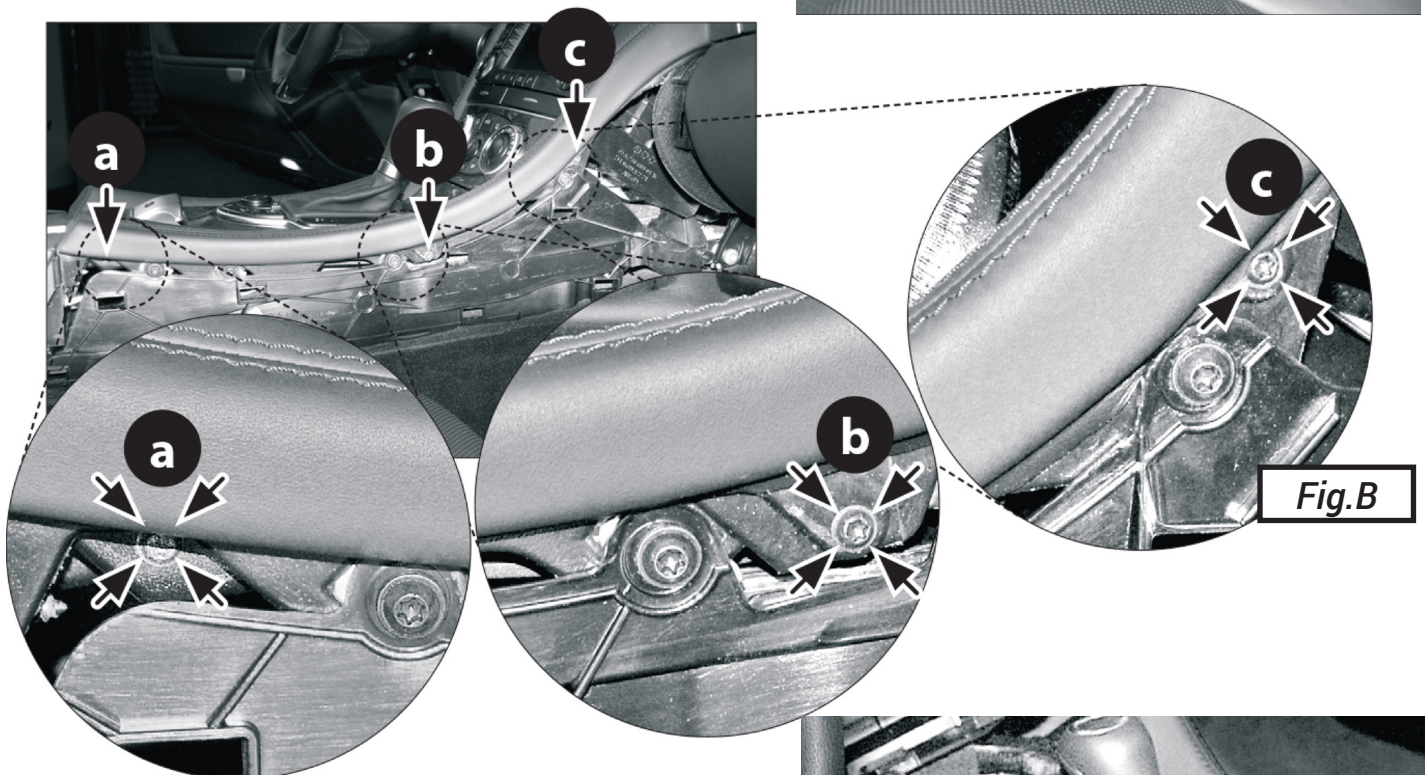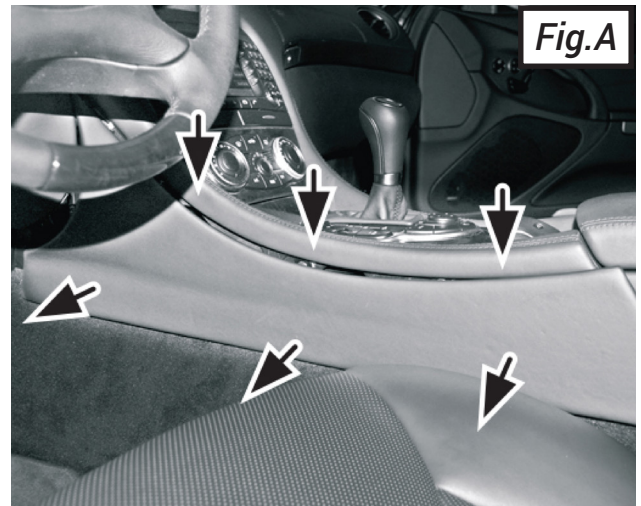

INSTALLATION GUIDE

4. Open both cup holders. Remove the two (2) Torx screws (now exposed following centre console removal) and remove the cup holders (Fig. D).



5. Press the two (2) plastic clips located under the OEM radio (Fig. E) and remove the OEM radio.

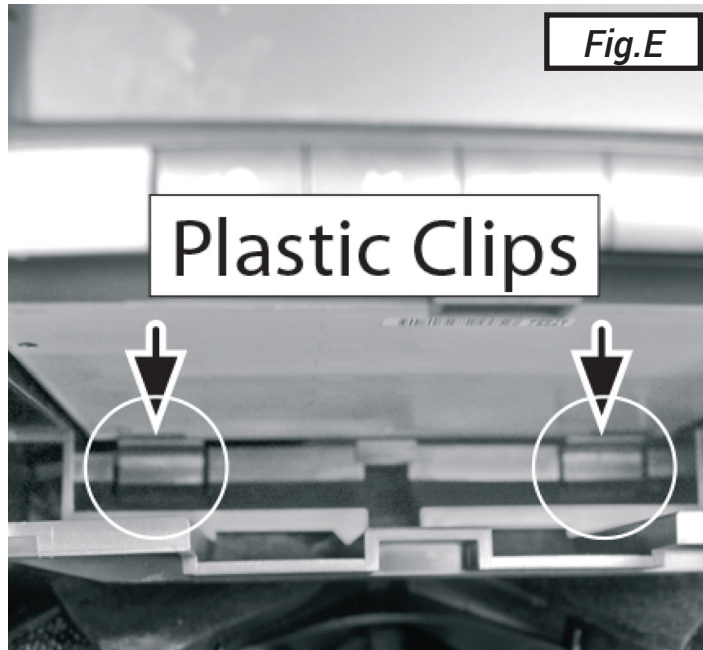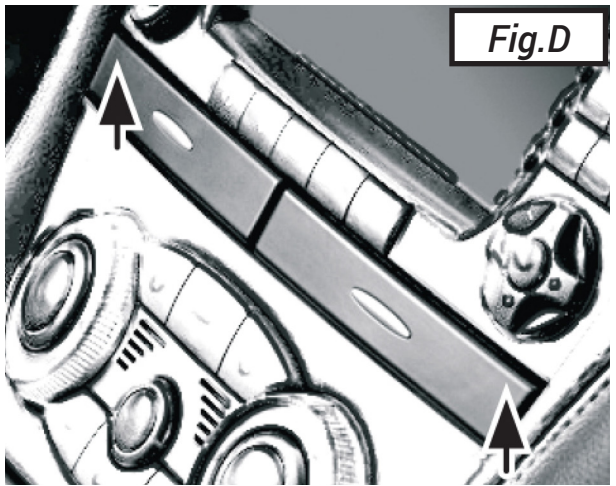

KIT ASSEMBLY

6. Mount the left and right brackets to the aftermarket head unit (Fig. F).

Note: the position of the copper-coloured can be adjusted for a perfect fit (Fig. G).

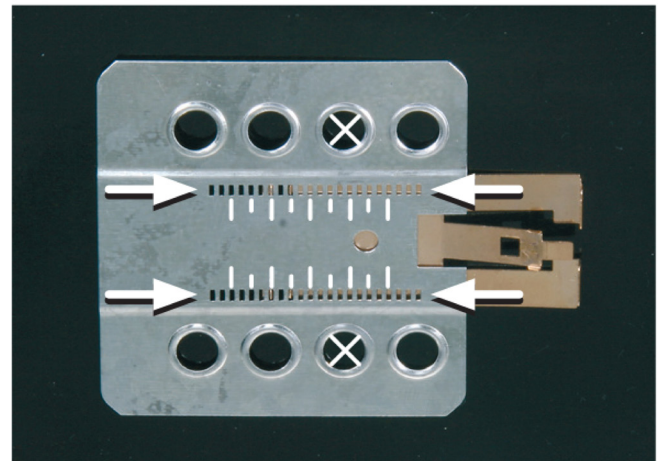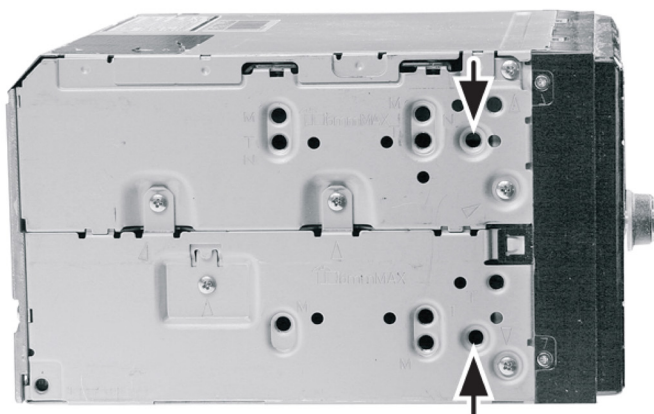

NOTES

7. Push the fascia panel into the dashboard, and push the stereo cage into the fascia panel (Fig. H).

8. Make all wiring connections to the aftermarket head unit and push it into the stereo cage until it clips into place. Surround with the trim panel.

9. Install all other components in the reverse order of disassembly to complete the installation (Fig. I).

